



Oak River Bulk Water Fill Station

OPERATING YOUR KEY FOB

1. To Start Pump

**Place key fob on reader until single beep is heard.
Pump will start once authorized**

2. To Stop Pump

Place key fob on reader until single beep is heard

